


USER MANUAL

moonⁱ

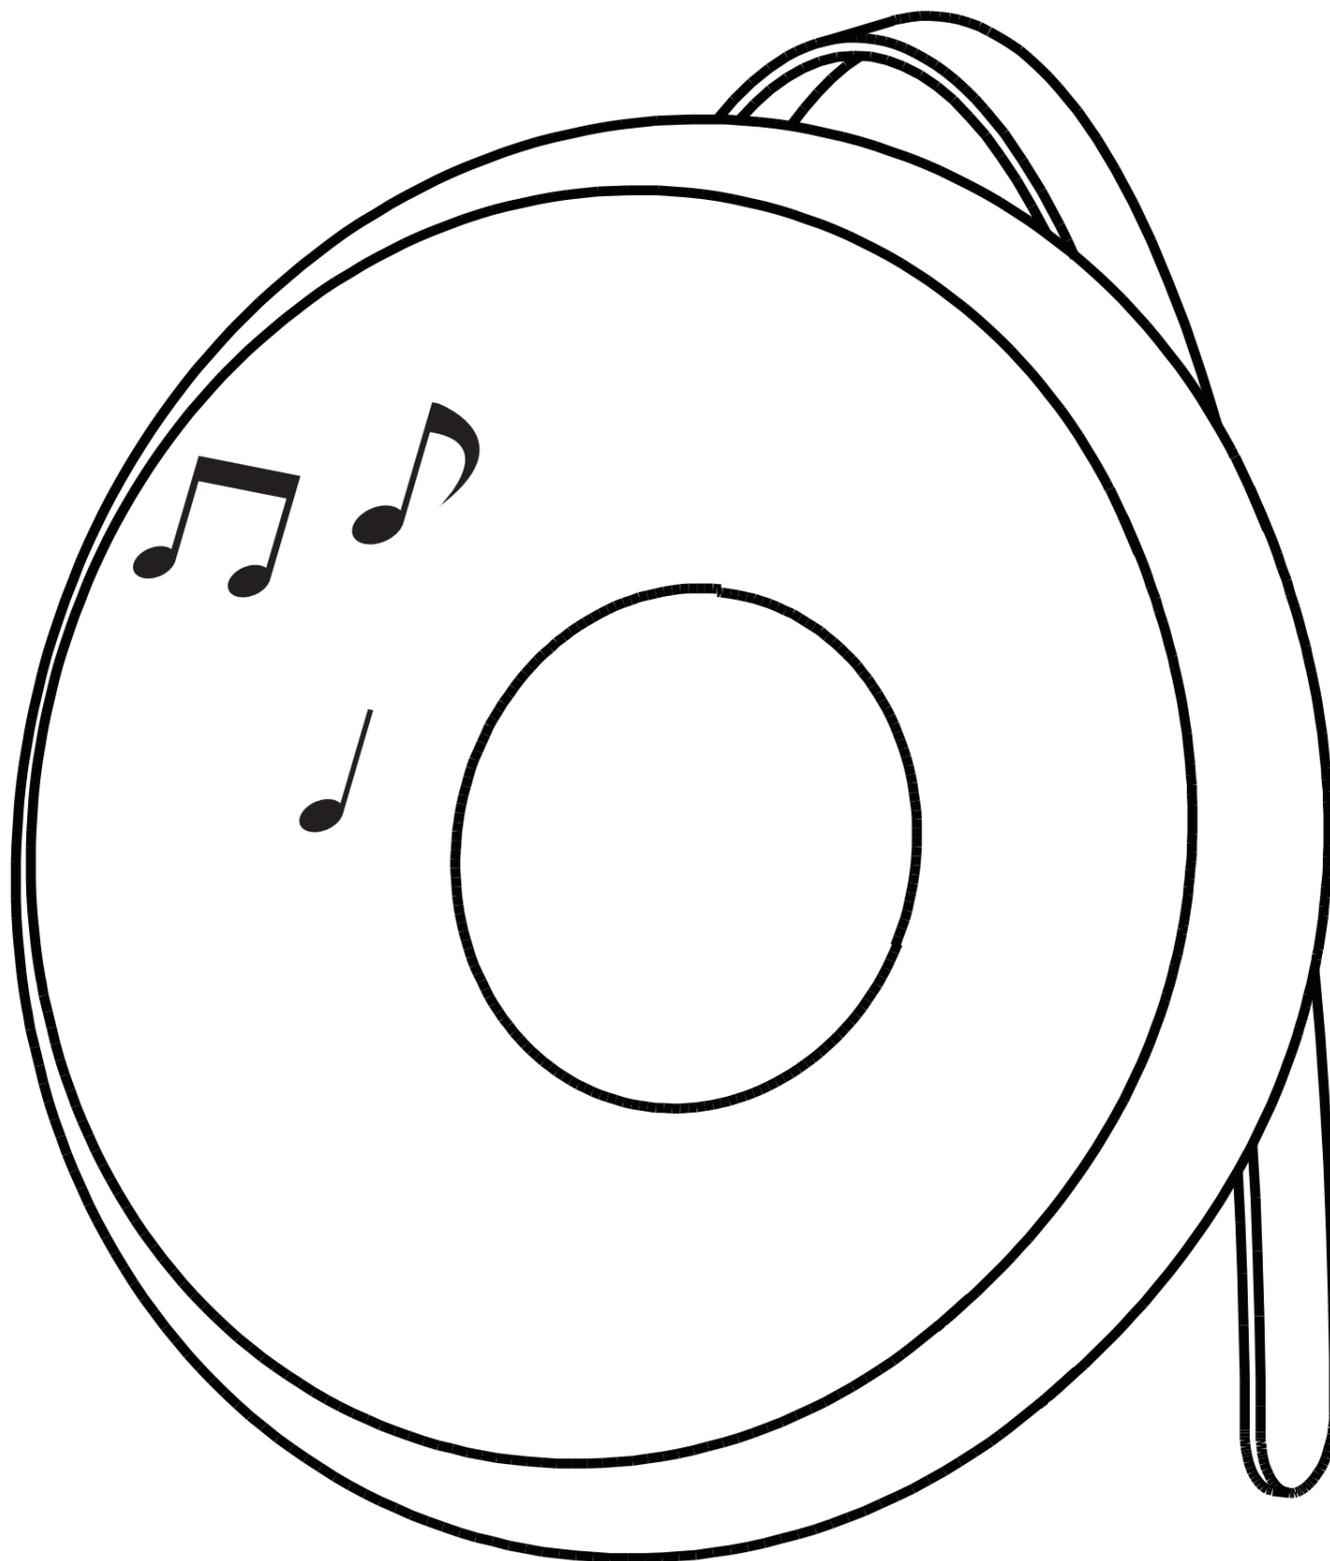

ECLIPSE SPEAKER

Rm.,2703-05,Dong Jun Plaza,
No. 836, Dong Feng Dong
Road, Post: 510100
Guangzhou,
China

URL: www.mooni.com



Tel: (+8620) 8765 5311
Mail: support@mooni.com

CE DECLARATION OF CONFORMITY

To whom It May Concern:

Thank you for your inquiry and your interest to work with mooni. As requested, here is the CE DECLARATION of CONFORMITY below:

1. WE, THE MANUFACTURER, HEREWITH DECLARE UNDER OUR SOLE RESPONSIBILITY THAT MENTIONED PRODUCTS MEET THE PROVISIONS OF THE CE DIRECTIVE FOR LED PRODUCT, ALL SUPPORTING DOCUMENTATION IS RETAINED UNDER THE PREMISES OF THE MANUFACTURER.

2. STANDARDS APPLIED: TEST REPORT AND CERTIFICATE OF STANDARDS FOR WHICH DOCUMENTED EVIDENCE OF COMPLIANCE CAN BE PROVIDED.

If you have any questions regarding this CE Declaration of Conformity, please do not hesitate to contact our sales staff at support@mooni.com

It is our goal to provide excellent products and customer service to meet your needs and the needs of your customers. We appreciate your business and look forward to working together.

SIGNATURE:

A handwritten signature in black ink, appearing to be "Jianlan Yuan", written over a horizontal line. The signature is stylized and cursive.

JIANLAN YUAN
Director

Safety Warnings - Precautions



- Keep this product out of reach of children younger than 8 years of age.
- Do not permit children to play with this appliance.
- This device should not be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of this appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children without supervision.
- Never place the unit or accessories near heat sources, open flames or on hot surfaces.
- Only use the original accessories and power supply.
- The power supply may generate heat while charging. Make sure that they are well ventilated.
- If the unit or one of its accessories is damaged, do not charge this Mooni product anymore.
- Do not disassemble the unit or its accessories.
- Repair may only be carried out by an experienced technician.
- Use a damp cloth to clean the unit and its accessories. Do not use aggressive chemicals, cleaning solvents or strong detergents.

Caution: This Lantern contains a rechargeable Li-ion battery. The remote control contains a button cell battery. At the end of their lifetime, these batteries should be recycled. Before bringing the lantern and remote control to a collection point, please open the bottom part of the lantern and separate the battery. Please return this battery together with the button cell to the dealer's shop or to a battery recycling collection point.

Please read more about environmental recommendations under "Environmental recommendations" in this manual.


Never short-circuit, open or expose a battery to heat or throw into fire as it can explode and cause serious personal injury.

Introduction


Thank you for purchasing this Mooni Product.

This manual contains important operating and safety instructions and we advise you to read and save this manual.


Contents

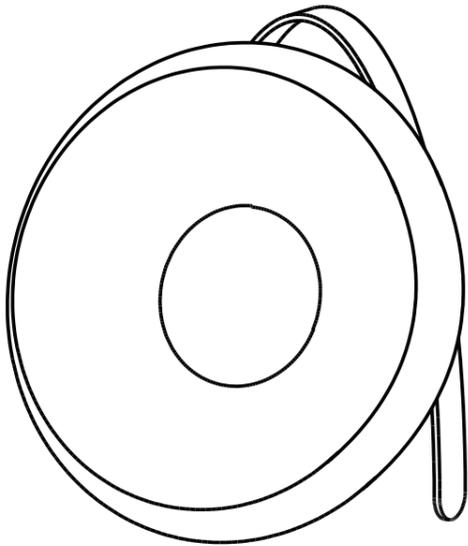

1x Mooni Eclipse Speaker

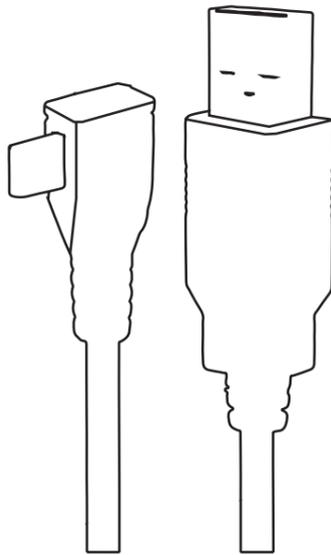


1x USB to Micro-USB 2m cable

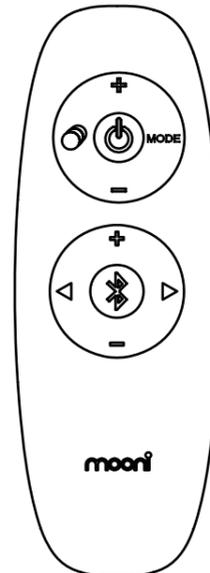

1x Remote control

Charging

1. Before first use, a full re-charge of the internal battery will be necessary.
2. Insert the USB cable into the Micro-USB port on bottom or side of the lamp.
3. Connect the USB Cable into any 5V USB power socket. For example, a computer/laptop, vehicle, power bank, or USB power adapter.
4. A red light will indicate when the product is being charged. The red light will turn off when the product is fully charged.
5. Disconnect the USB cable from the lamp and

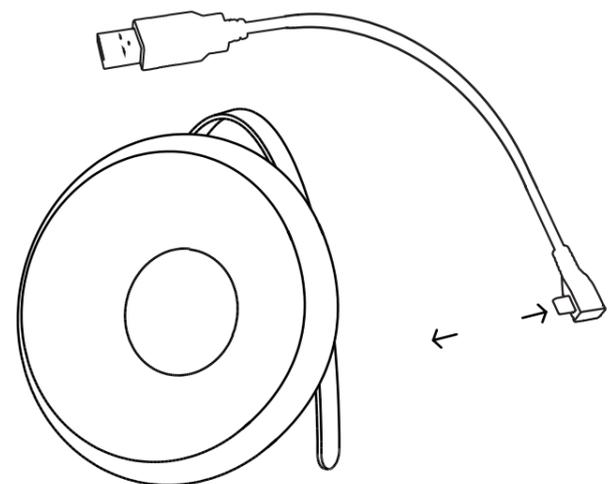


How to take care of the internal battery:

Partial discharges with frequent recharges are much healthier for the li-ion battery than a long deep discharge.

During a long storage period of your product, try to keep the li-ion battery at a charged level of about 50%

Note: The integrated rechargeable battery will lose its energy even while the product is not being used. The rate of self-discharge is dependent on the state of charge, ambient temperature and other factors. A full recharge of the product immediately after storage and before use is recommended.


Basic Instructions - Master Button

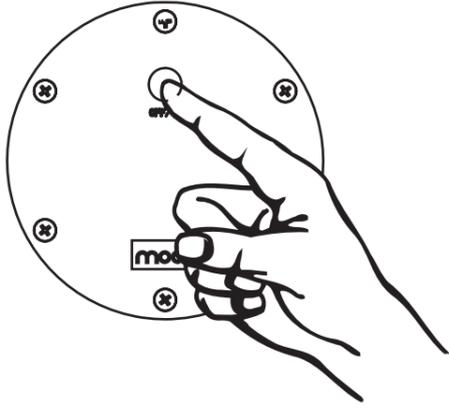

1. Use the On/Off button located on the bottom plate of the product.
2. Press the button to switch the product on.
3. Press repeatedly to choose the desired color or color mode.
4. Press and hold the button for more than 1 second to switch the product off.

The product can produce light in multiple colors and in 4 different lighting modes. You can select these different colors and modes by pressing the button described above or by using the remote described below.

Basic Instructions - Remote

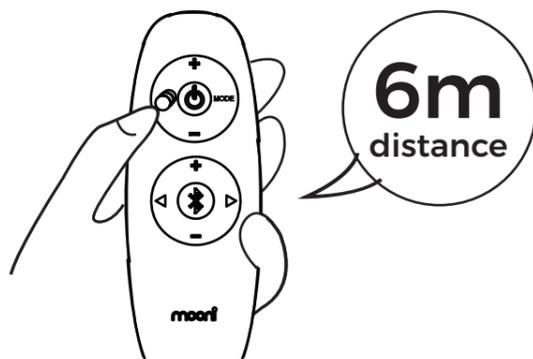

1. Press the  button to switch the lamp and speaker On/Off or press the  to only turn the speaker On/Off.
2. Use the TOP +/- buttons to adjust the light intensity.
3. Use the  button to select or change color.
4. Use the MODE button to choose the desired color mode.
5. Amplify the volume by pressing the BOTTOM +/- buttons.
6. Press the  or  buttons to skip or rewind tracks.

Bluetooth & Speaker

We offer Bluetooth technology to stream music to your Mooni Product with any Bluetooth device. This Mooni Speaker is equipped with Bluetooth chip 4.2. This means you can connect up to 2 Mooni Speakers with your smartphone/tablet.

1. Press the  or  button on the Mooni Remote to turn on speaker function. You can also turn on the speaker by pressing the button on the bottom of the Mooni product to turn on the speaker. You will hear a tone after you turn on the speaker.
2. Move near the Mooni Product.
3. Activate the Bluetooth function on your Bluetooth device. It may take a while before "Mooni" is shown in the list.
4. Select "Mooni" to make the connection.
5. Once connected to "Mooni", press play on the music application of your choice and enjoy.

Stereo pairing

This Mooni speaker is Stereo Ready. If you have two Stereo Ready speakers close to each other, they will automatically sync together and bring you true stereo sound. You only have to connect your bluetooth device with one of the Stereo Ready Mooni speakers. The other speaker will automatically connect.

If you purchased both speakers together and are pairing them both for the first time:

1. Turn ON both stereo ready speakers. You will hear the first tone indicating it is ON.
2. Wait for the secondary tone from both speakers indicating that they have connected to each other (this can take several seconds).
3. Now, follow steps 2 to 5 in the Bluetooth Connection Instructions to connect (Your bluetooth device will select one speaker to connect to).

If you are adding a new stereo ready speaker to one you purchased previously:

1. With both speakers OFF, go to your Bluetooth setting on your device and "forget" or "remove" the previously saved Mooni device(s).
2. Turn OFF your Bluetooth on your device.
3. Turn ON both stereo ready speakers. You will hear the first tone indicating it is ON.
4. Wait for the secondary tone from both speakers indicating that they have connected to each other (this can take several seconds).
5. Now, follow steps 2 to 5 in the Bluetooth Connection Instructions to connect (Your bluetooth device will select one speaker to connect to).

Technical Specifications

| | |
|--------------------------------|--------------------------------------|
| Usage time: | 4-12h |
| Charging time USB: | 4-8h |
| Charging time Wirefree: | 8h |
| Input USB: | 5V (recommended 500mA-1A) |
| Built in rechargeable battery: | 3.7V Li-ion 2000mAh |
| Power lamp: | 5W |
| Power speaker: | 10W |
| Dimensions: | 267 x 400 mm |
| Lifetime LED: | 20 000h |
| Water resistance: | IP44 |
| Ambient operating temperature: | -20°C ~ 45°C |
| Storage temperature: | -25°C ~ 60°C |
| Operating temperature: | 0°C ~ 65°C |
| Storage humidity: | 20 ~ 90% |
| Button cell remote control: | CR2032 (non-rechargeable) 3V lithium |



Environmental Recommendations

Regarding used batteries

The customer should return used batteries to the retailer's shop or to a collection box for battery recycling.

Regarding waste from electrical and electronic equipment (WEEE)

This symbol on the product or the packaging indicates that the equipment carrying this mark must not be thrown into general waste but should be collected separately and properly processed under local regulations. The appropriate take-back systems will reuse or recycle most of the materials of your end-of-life product in an ecological way to diminish the pressure on natural resources. Please contact your local waste administration if you need more information on the collection system.



Warranty and Warranty Limitations

This Mooni product is warranted to be free from defects in material and operation for one year. In the unlikely event that it is found to be defective within this period of time, the importer/manufacturer will repair or replace it. When returning the defective product, the sales receipt must be enclosed.

The Warranty does not cover: problems caused by abuse or by environmental conditions that are not in conformance with the recommended operations of the product. Accidental or deliberate damage, repairs or product alterations made by persons without written consent from Mooni are also not covered. Batteries are considered wear parts therefore they are not included in the warranty. The product does not function properly due to problems with connection and/or access to your Bluetooth™ device (e.g. Such as a cell phone, tablet, computer). Abnormal voltage. Under no condition can the importer/manufacturer be held liable for damage to items or appliances for incidental or consequential losses or expenses incurred. This does not affect your statutory rights.

For questions:

Please contact us on support@mooni.com or check the website www.mooni.com.

Importer/distributor:

Mooni International AB
Brädgårdsvägen 28, 236 32, Höllviken, Sweden